




5

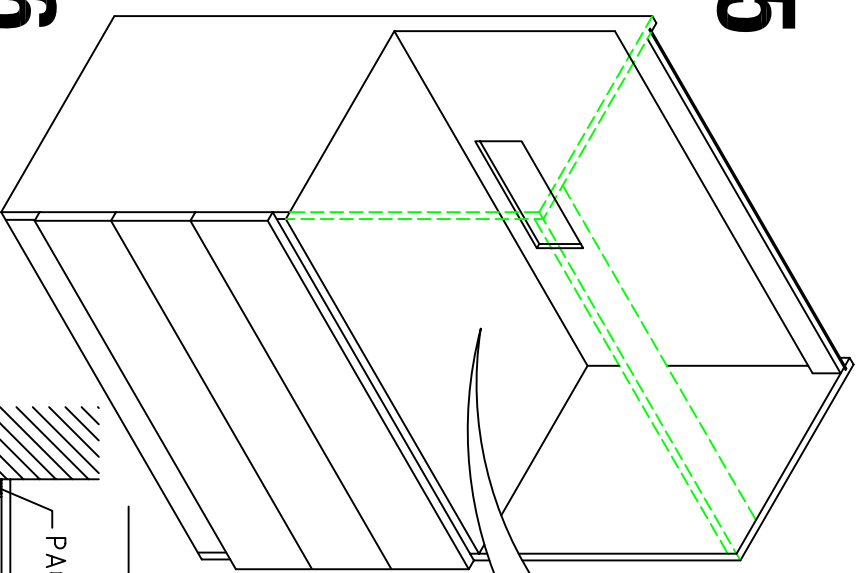


BEFORE FITTING CUT A SUITABLE HOLE IN THE BACK PANEL TO ALLOW VENTILATION AND TO PROVIDE ELECTRICAL CONNECTIONS TO THE T.V.

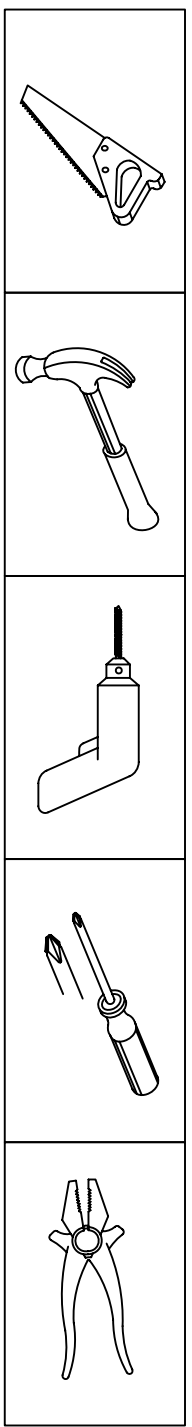

6

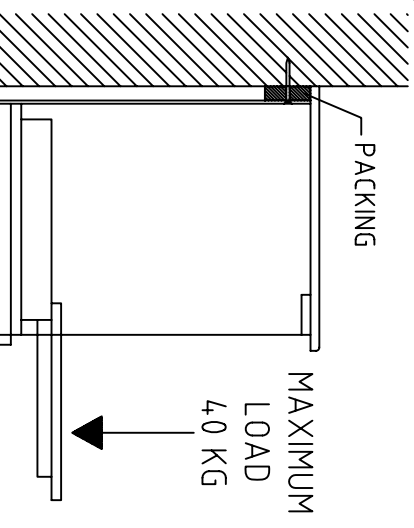

ENSURE THAT THE UNIT IS SECURELY FIXED TO THE REAR WALL BY SCREW FIXING THROUGH THE TOP REAR RAIL.  
NOTE: A PACKING BATTEN SHOULD BE PLACED BEHIND THE RAIL AS SHOWN.

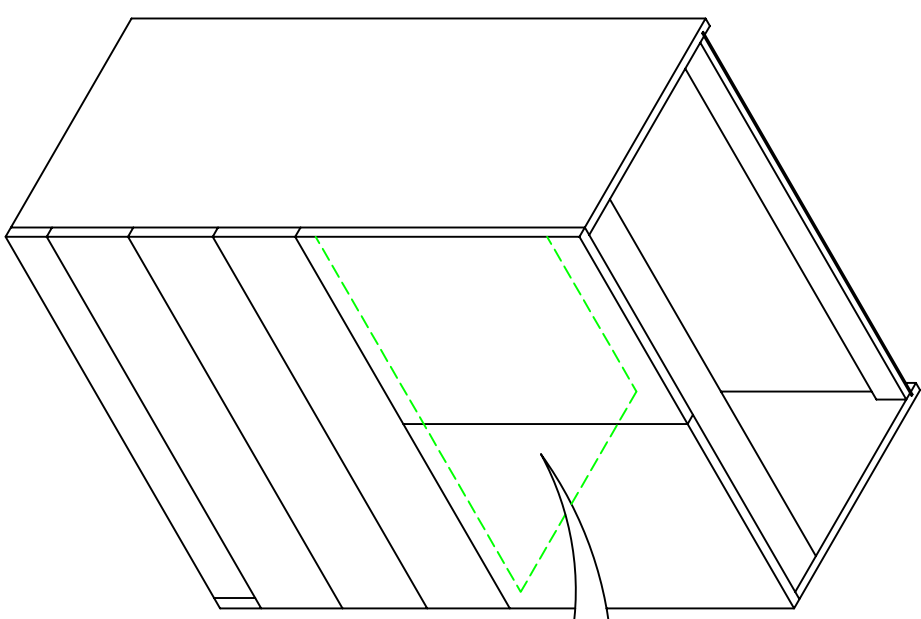

CONVERSION KIT TO BE USED IN CONJUNCTION WITH STANDARD TALL BOY UNIT

T.V UNIT  
CONVERSION KIT

- |   |     |  |
|---|-----|--|
| A | 4 X |  |
| B | 4 X |  |
| C | 6 X |  |
| D | 6 X |  |