

COMBI ROBE DRILLING TEMPLATE



Please use this template to drill wardrobe LHD & RHD side panels to accept 4 of 167mm drawer fronts.

PLEASE NOTE: DRILLINGS A & B SHOULD ONLY BE DRILLED TO SUIT TYPE OF DRAWER BOX BEING FITTED - See drilling detail (right).

MARK OUT DRILLINGS BEFORE ASSEMBLY

Drillings:

- A = $\varnothing 2.4$ x 6-8mm Deep - Part extension roller runners, 3 sided dwr box.
- B = $\varnothing 5$ x 8mm Deep - Full extension soft close drawers, 4 sided dwr box.
- C = $\varnothing 5$ x 8mm Deep - Shelf bracket drillings.

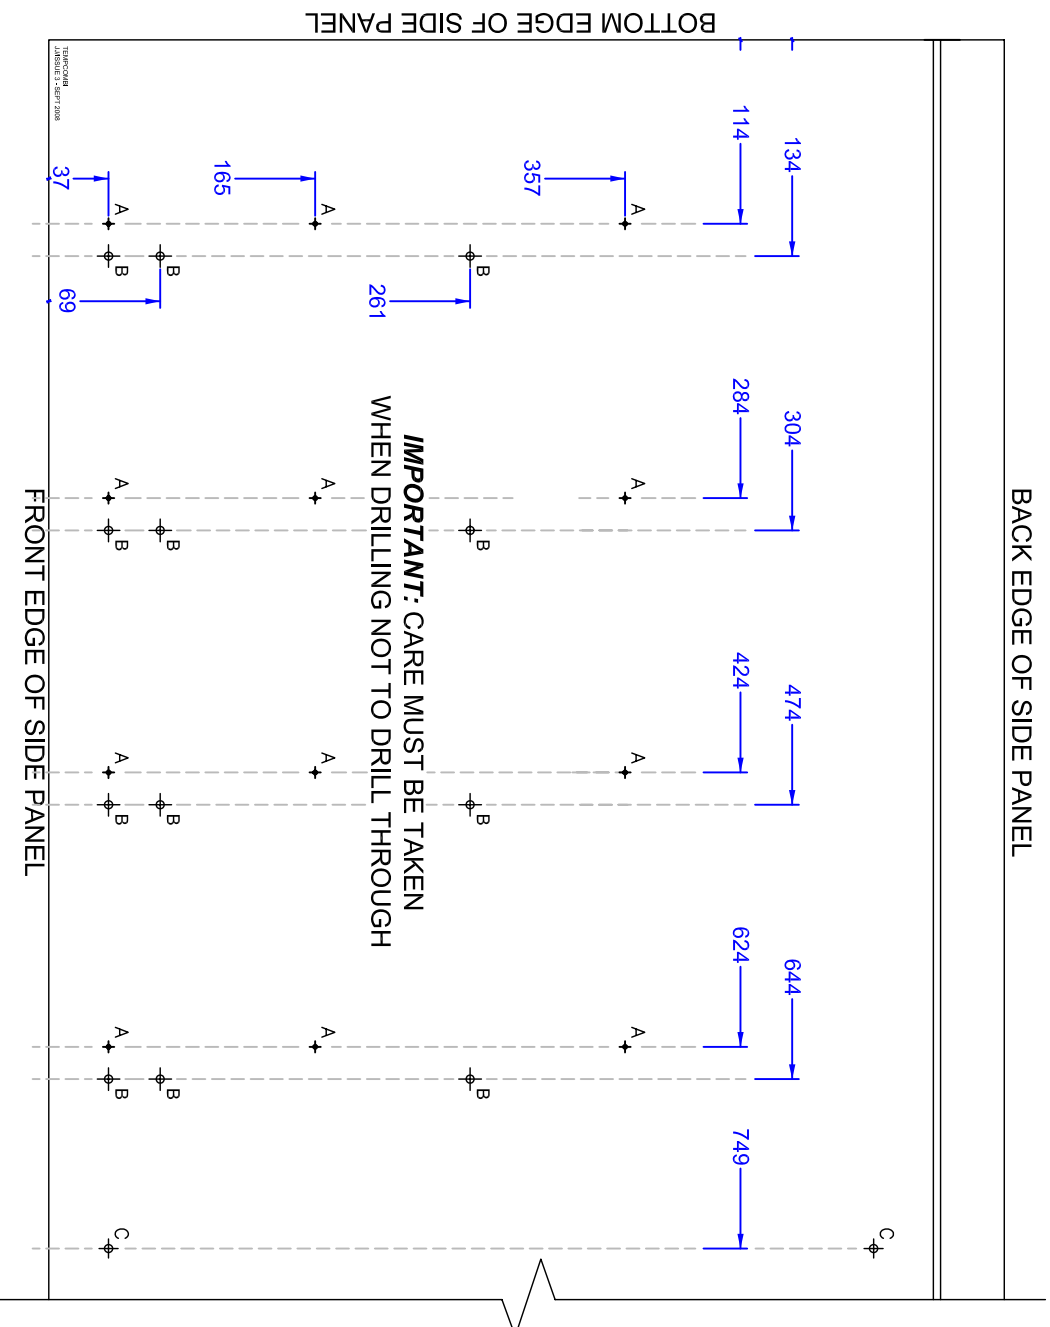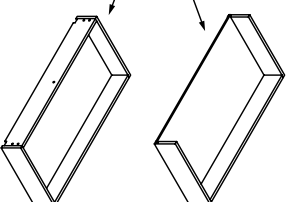

RIGHT HAND PANEL SHOWN - DRILL LEFT HAND OPPOSITE TO DRAWING