
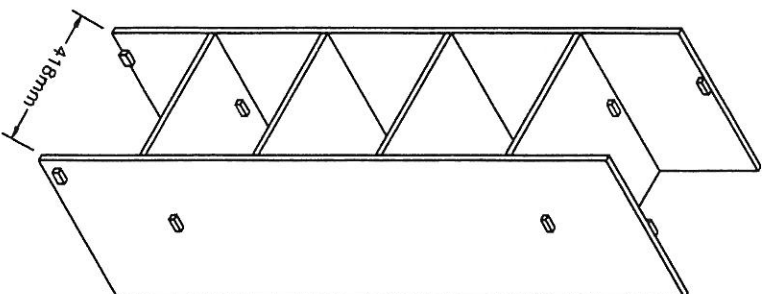
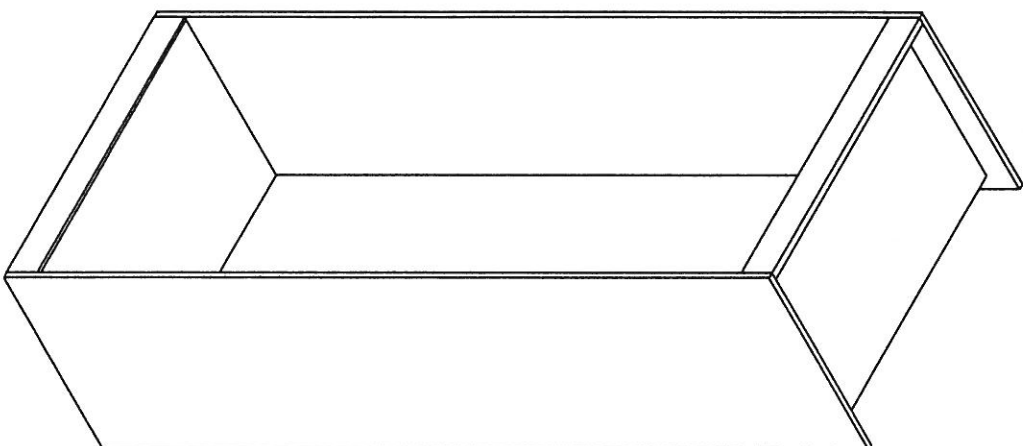


# INTERNAL ROBE DIVIDER ASSEMBLY INSTRUCTIONS

COMPONENTS LISTING:		
SIDE PANELS	1691x470mm	2-OFF
SHELVES	418x455mm	4-OFF

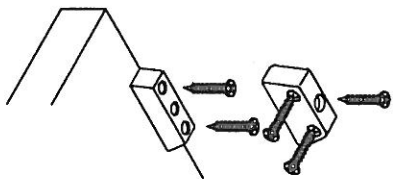

1. INSERT THE SHELF PEGS INTO THE PRE-DRILLED HOLES IN THE SIDE PANELS
  2. ATTACH THE FIXING BLOCKS TO TWO OF THE SHELF PANELS AS SHOWN.
  3. LAY THE SIDE PANEL ON A FLAT SURFACE, OFFER THE SHELF UP TO THE PEGS AND USING THE FIXINGS SUPPLIED, SECURE THE SHELF TO THE SIDE PANEL. REPEAT FOR THE OTHER SHELF.
  4. ADD THE OTHER SIDE PANEL USING THE FIXING METHOD. STAND VERTICAL AND INSERT THE OTHER SHELVES ONTO THE SHELF PEGS.
  5. POSITION THE SHELVING UNIT INTO THE WARDROBE AS REQUIRED.
  6. FIT THE MID ROBE SHELF ON TOP OF THE SHELVING  
(TWO SHELF PEGS WILL BE REQUIRED TO SUPPORT THE END OF THE SHELF NOT SUPPORT WITH THE INTERNAL SHELF UNIT)
  7. SECURE THE INTERNAL UNIT TO THE ROBE BY FIXING TO THE MID SHELF AND BOTTOM PANEL USING THE FIXINGS SUPPLIED.
- PLEASE NOTE !  
IF THE PLINTH SECTION IS TO BE USED – PLEASE FIT BEFORE FITTING THE INTERNAL SHELF UNIT  
AS THE BOTTOM PANEL MAY HAVE TO BE REMOVED TO FACILITATE FIXING.

PARTCODE: 2462414